

Fig 1.
First plank, first row. Start in a left-hand corner of the room with the locking strip (groove) facing the room. Remember to leave a gap between the wall (left) and the board. It is practical to adjust the gap between the long sides and the wall later, when three rows have been installed.

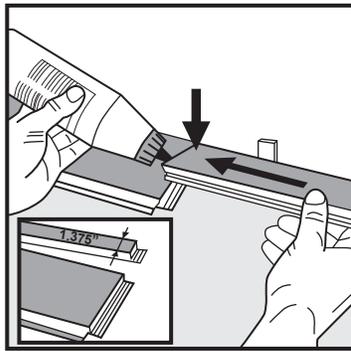


Fig 2.
Joining length cut panels. First row(s). Glue the joint with white glue, put a weight over until the glue has hardened.

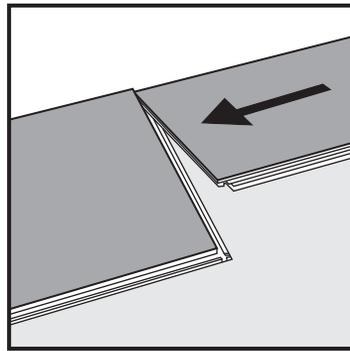


Fig 3.
Second plank, first row. Place next floorboard tight to the short end of the first one in the corner.

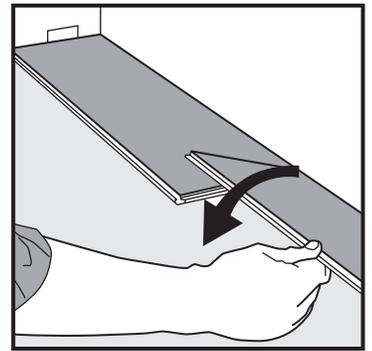


Fig 4.
Then fold down with a single action movement. Make sure the long sides of the planks make a straight line. Complete the first row in the same way.

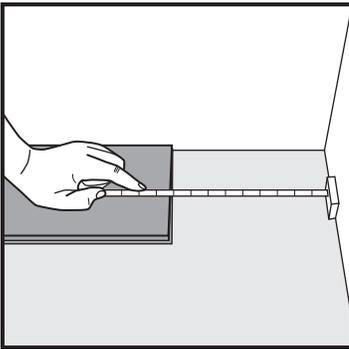


Fig 5.
At the end of the first row, put a distance of 1/2", to the wall and measure the length of the last plank to fit.

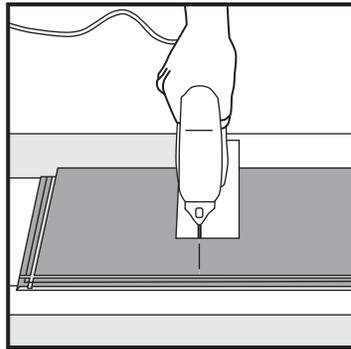


Fig 6.
Cut with a saw – hardwood turned down or with a hand saw with the hardwood visible.

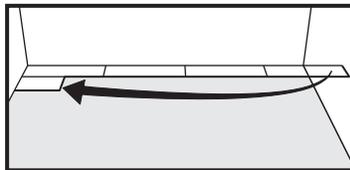


Fig 7.
Second row.

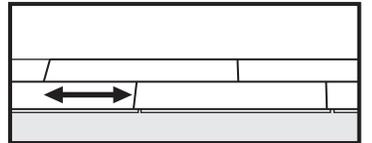


Fig 8.
General. Minimum distance between short ends of planks in parallel rows shall not be less than 9" or half the distance of the plank.

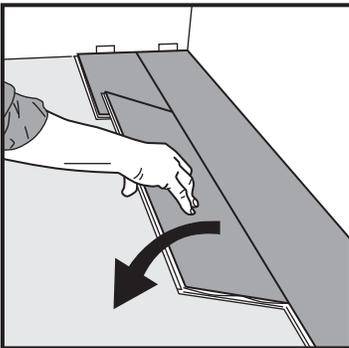


Fig 9.
Second plank second row. Place the floorboard tight to the short end of the previous panel and fold down in a single action movement.

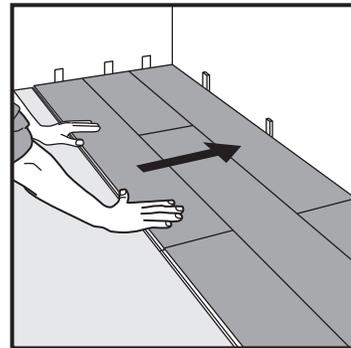


Fig 10.
After 2-3 rows. Adjust the distance to the front wall by placing distances \approx 1/2".

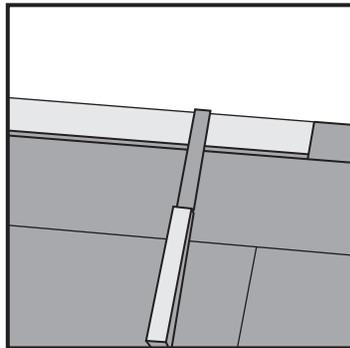


Fig 11.
Last row. Cut the panels lengthwise and glue the short ends.

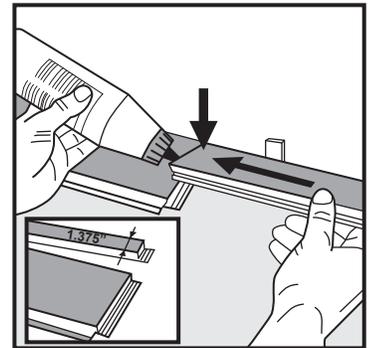


Fig 12.
Joining length cut panels. First/last row(s). Glue the joint with white glue, put a weight over until the glue has hardened.

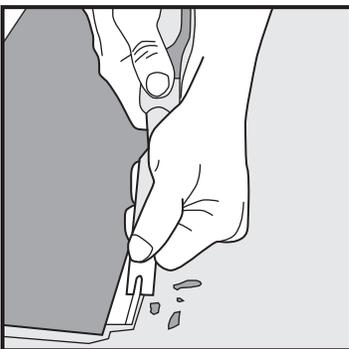


Fig 13.
Horizontal installation (where angling is not possible). Cut off the locking element by using for example a chisel.

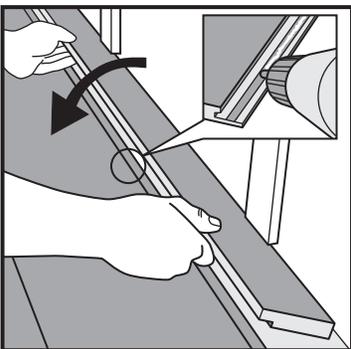


Fig 14.
Put white glue along the adjusted profile and press the panels horizontally together.